


CONTENTS

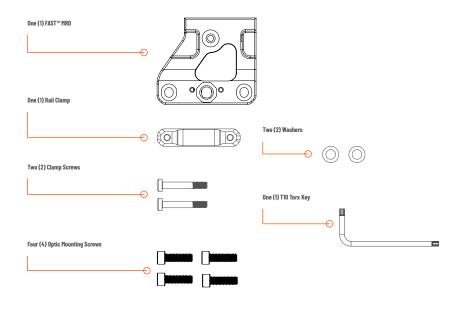

PRODUCT OVERVIEW

The FAST™ MR0 (Miniature Rifle Optic) mount is designed for the Trijicon® MR0 and Trijicon® MR0 HD. It features a built-in, fully adjustable rear back-up iron sight that is compatible with a standard front sight for a traditional sight radius. It comes standard with a two cross bolt rail clamp or can be retrofitted with the FAST™OD Lever and works with all FAST™ FTC magnifier mounts.






WARNING: ENSURE FIREARM IS UNLOADED



OVER-TORQUING FASTENERS CAN DAMAGE YOUR MOUNT AND/OR YOUR OPTIC AND WILL VOID YOUR WARRANTY. USING THREAD LOCKING COMPOUNDS, SUCH AS LOCTITE® OR OTHERS, IS NOT RECOMMENDED AND WILL YOID YOUR WARRANTY.


Using the UNITY™ supplied Optic Mounting Screws, install the optic to the mount. Tighten the screws in an "X" pattern until they are finger tight. Give each screw a 1/8 - 1/4 turn with the supplied torx key. **Do not exceed manufacturer's recommended torgue spec.**

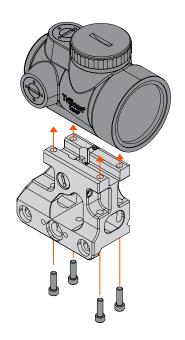


Place the FAST™ Micro mount on the M1913 Rail in desired location. If using the included Rail Clamp, move to step 3. If using the optional FAST™ 0D Lever (sold separately), jump to step 4.

Insert each Clamp Screw through a Washer. Then insert them through the FAST™ MRO mount and thread them into the Rail Clamp. Secure screws using a T25 bit driver. Lightly snug all screws before applying final torque to any. **Torque to 35 in-lbs (4 Nm)**. Jump to step 5.

Optional FASTTM QD (Quick Detach) Lever (sold separately) can be installed in place of the Rail Clamp. Installation instructions are included with the lever.

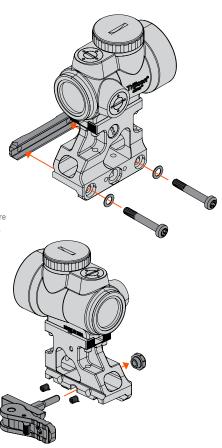

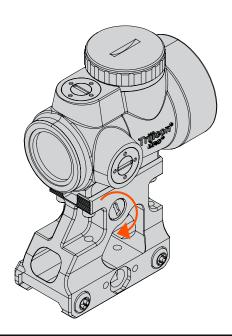





©2024 UNITY Tactical. All Rights Reserved.

Specifications subject to change without notice. PAT: UTIP.CO



